
 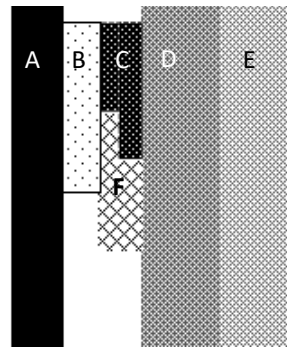


DecorSlat Panel Split Batten Fixing Method

Wall Application Only



- A. Timber Slat with acoustic fabric backing (Part of DecorSlat panel)
- B. Secondary carrier (part of DecorSlat Panel)
- C. Split Batten
- D. Softwood batten/metal stud (For non-acoustic areas, this can be removed)
- E. Wall Substrate
- F. Split Batten

1. Set out the timber studs or steel sections to suit the size of the panels.
2. Fix lengths of split batten to your framework (soft wood batten or metal stud)
3. Fix the other lengths of split batten to the rear of the panels
4. Locate and position timber panels with split batten mounted. Lift and drop or slide into place
5. Continue with the remainder of the panels until whole wall area is clad

Disclaimer:

All specifications shown in these documents are intended as a guide only & should not be considered as conclusive. Fixing types & sizes used to install these products must be considered in conjunction with site conditions.

It is the users responsibility to ensure the use of this document coincides with their own judgment and is appropriate for the application.

DecorSystems cannot be held responsible for any consequences arising from the improper use of this manual (whether negligence or otherwise)

THESE DESIGNS, DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF DECORSYSTEMS & MUST NOT BE USED, RETINED OR COPIED WITHOUT THE WRITTEN AUTHORITY OF DECORSYSTEMS

DECOR[®]
Systems