


DecorArti with DSB Fixing Method

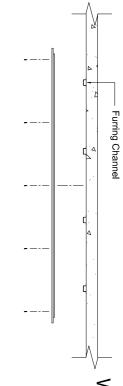


Wall or Ceiling Application

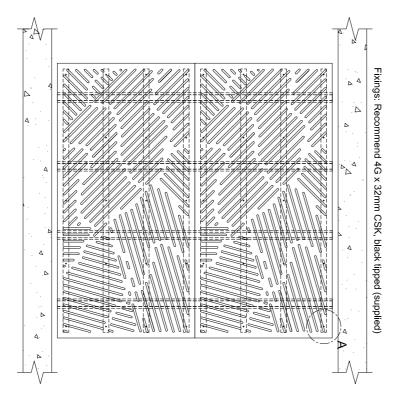

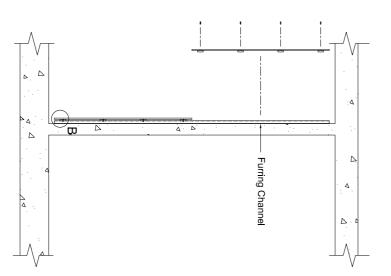


NOTE: FIXED FROM FRONT (face fixed)

Use black screws (supplied, secret fix) NOT suitable for Ø5mm or less

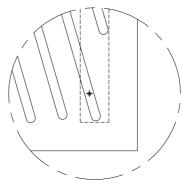

Detail A - 1:5

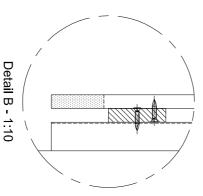

Disclaimer:

All specifications shown in these documents are intended as a guide only & should not be considered as conclusive. Fixing types & sizes used to install these products must be considered in conjunction with site conditions


It is the users responsibility to ensure the use of this document coincides with their own judgment and is appropriate for the application. arising from the improper use of this manual (whether negligence or

Installation Guide

ω Ν →


Continue with the remainder of the panels until whole wall or ceiling area is clad.

Set out the timber studs or steel sections to suit the size of the panels. Recommendation of 400mm centres.







DecorArti with Face Access Fixing Method



NOTE: FIXED FROM FRONT

Wall or Ceiling Application

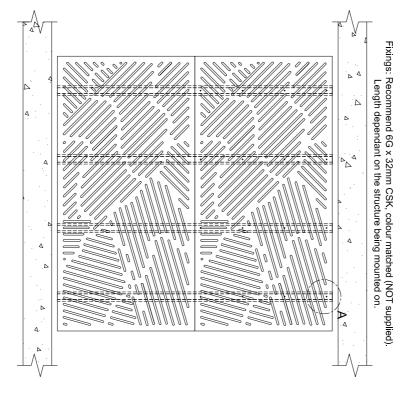

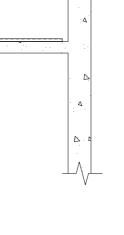

Furring Channel





Δ

 \triangle

All specifications shown in these documents are intended as a guide only & should not be considered as conclusive. Fixing types & sizes used to install these products must be considered in conjunction with site conditions

It is the users responsibility to ensure the use of this document coincides with their own judgment and is appropriate for the application. arising from the improper use of this manual (whether negligence or







Installation Guide

- ω Ν → Set out the timber studs or steel sections to suit the size of the panels. Recommendation of 400mm centres. Locate & position timber panels, fixing through the face of the panel (on an angle if required) into your framework [Detail A & B]
- Continue with the remainder of the panels until whole wall or ceiling area is clad.

DecorArti with BJ2 Fixing Method


Wall Application Only

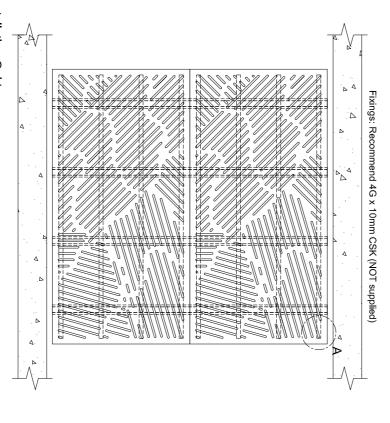

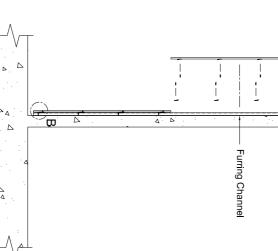

Installation Guide

- ω Ν → Set out the timber studs or steel sections to suit the size of the panels. Recommendation of 400mm centres.
 - Fix one length of BJ2 to your framework with the short lip facing up [Detail B]. Recommendation of 600mm centres (or less).
- configuration as the structure mounted BJ2 is used. Fix the other length of BJ2 to the rear of the panels, with the short lip facing down [Detail B]. Ensure that the same centre
- 4 7 Locate & position timber panels with structure mounted BJ2. Lift and drop or slide into place.
- Continue with the remainder of the panels until whole wall area is clad

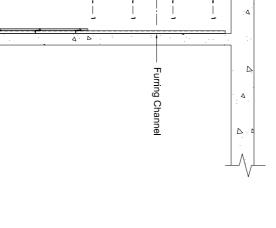

Detail B - 1:10






It is the users responsibility to ensure the use of this document

DECOR SYSTEMS AUSTRALIA & MUST NOT BE COPYRIGHT THEREOF ARE THE PROPERTY OF JSED, RETAINED OR COPIED WITHOUT THE WRITTEN THESE DESIGNS, DRAWINGS & SPECIFICATIONS & arising from the improper use of this manual (whether negligence or coincides with their own judgment and is appropriate for the application Decor Systems cannot be held responsible for any consequences



AUTHORITY OF DECOR SYSTEMS AUSTRALIA.

NOTE: FIXED FROM REAR (secret fixed)

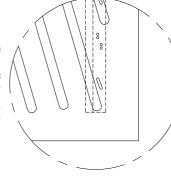

Detail A - 1:5

