

# DECORZEN


Perforated interior acoustic timber panel systems



www.decorsystems.com.au


## HOW TO SPECIFY

## 1. Choose your SUBSTRATE

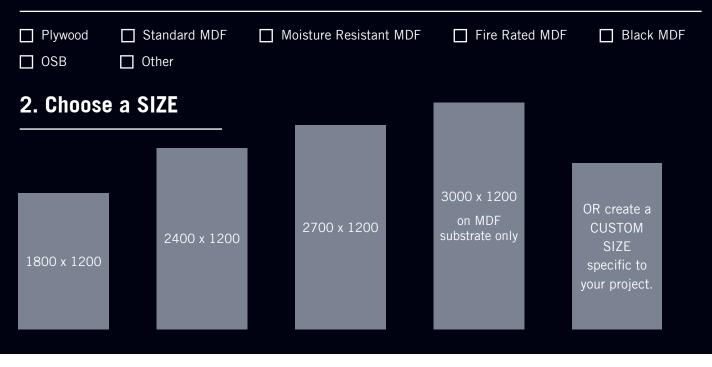


## 3. Choose a PROFILE


#### Product Type AP125S

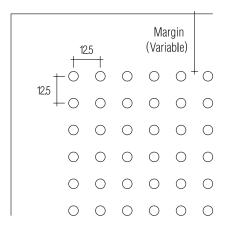


#### Product Type AP250S

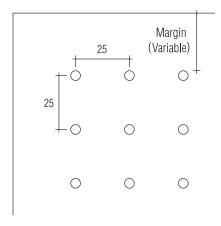


Product Type AP125D

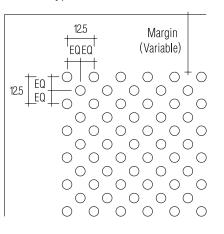

#### Product Type AP250D

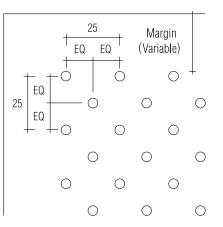


Available with hole sizes ranging from 4.5mm to 12mm diameter in a selection of patterns as detailed. Diversity of perforation options allow for open area of panels to range from 2.5% up to 36% nominally.

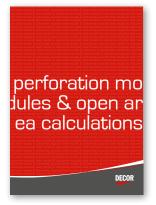



Please refer to perforations booklet for more information.


## 4. Choose an EDGE

### and a JOINT

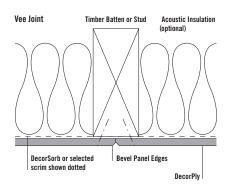



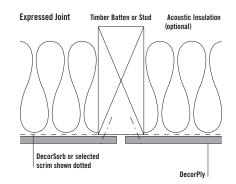

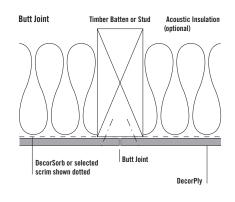

## 5. Choose a FINISH (For more colours please refer to our finishes booklet)

Decorlmage						
Euro Beech	Hoop Pine	Rock Maple	Royal Cherry	Spotted Gum	Tasmanian Oak	Walnut
Natural Timbe	r Veneer – Or a	ny veneer of you	ur choice			
Queensland Hoop Pine	Ned Kelly Ironbark	Roma Blackwood	Alaskan White Ash	Albany Blackbutt	Californian Cherry Crown Cut	Northern Beach
SmartLook Op	tions					
Austrian Forest Maple	Cervera Pine	Oxbow Maple	Aldini Oak	Mozart Beech	Romano Cherry	Paterna Walnut
				Any solid	polyurethane	

"Wentworth Cherry



Midnight

**Blanket White** 

Finishes are subject to change without notice due to availability.



## **HOW TO WRITE UP THE SPECIFICATION:**

- Wall/Ceiling panels shall be DecorZen 12 by Decor Systems.
- Contact Decor Systems on Ph: 1800 835 035 (please choose a profile and face finish and insert into the posts below)
- Panels shall be installed with Profile: \_\_\_\_\_\_
  and face finish of: \_\_\_\_\_\_ (Natural Timber
  Veneer DecorClear, DecorThane, DecorNexx,
  SmartLook, and DecorImage)
- DecorSorb IAB to be applied to the rear of the panels.
- Panels to be finished with **DecorClear** 2 pack Polyurethane finish with the addition of **BioPanel Zap-X**.
- Panels to be installed in accordance with manufacturer's instructions, with either BJ2 Systems or DSB System.
- Joint to be \_\_\_\_\_\_ (please choose a joint option)
- Edging to be \_\_\_\_\_(please choose an edging option)

- Panels to be include **DecorInsul** (Option 8 SmartPack) behind the panels.
- Decor Systems Panels require a 7 day acclimatization on site prior to installation.

Additional Items that may be required for your project include:

- FSC, GECA, Fire Ratings, and Returns: Please call the Decor Systems Team to discuss on 1800 835 035
- Acoustic Panel type cannot to be substituted unless agreed by Architect \_\_\_\_\_\_
   and Acoustic Engineer \_\_\_\_\_\_
   (Please insert corresponding names)
- All panels must be supplied with Completion
  Certificate Number \_\_\_\_\_\_.
  (Please contact Decor Systems for your project specific reference number)



#### **DECOR SYSTEMS AUSTRALIA**

FREECALL 1800 835 035

FAX 02 9648 1800

LMAIL letstalk@decorsystems.com.au

#### DECOR SYSTEMS NZ

FREECALL 0800 000 697

EMAIL letstalk@decorsystems.co.nz

#### DECOR SYSTEMS AUSTRALIA

#### NEW SOUTH WALES

House of Decor 6 Millennium Court Silverwater NSW 2128 Australia

#### QUEENSLAND

160 Lytton Road Balmoral QLD 4191 Australia

#### VICTORIA

91 – 115 Link Drive Campbellfield VIC 3061 Australia

#### WESTERN AUSTRALIA 7 Bellows Street

7 Bellows Street Welshpool WA 6106 Australia

#### **DECOR SYSTEMS NZ**

2 Edmonton Road Hornby Christchurch 8042 New Zealand

#### DECOR SYSTEMS USA

14250 Judicial Road Minneapolis MN 55306 USA

#### **DECOR SYSTEMS UK**

178 Cheddon Road Taunton TA2 7AN United Kingdom



